


Product Introduction

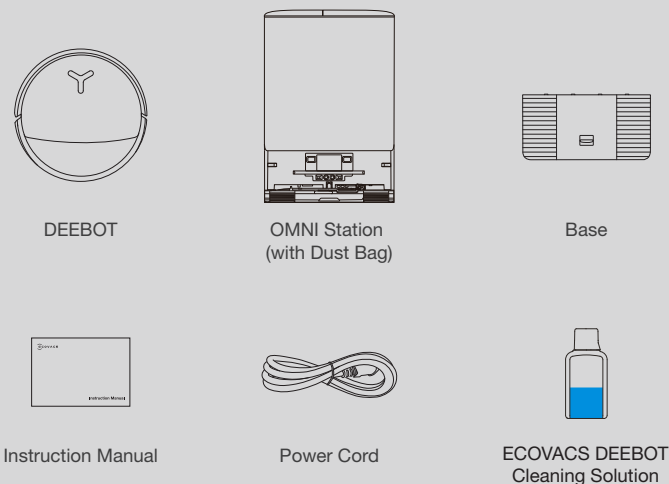

These are spare parts: Side Brush*1, ECOVACS DEEBOT Cleaning Solution*1, Antibacterial Roller Mop*1

Tip: It is recommended to retain all original packaging materials after receiving your product to ensure smooth after-sales support in the event of transportation damage. The actual appearance is subject to the actual product.

IMPORTANT SAFETY INSTRUCTIONS



- For the first use, it is recommended to map your home first and repeat vacuuming for 2-3 times before mopping for better cleaning performance.
- If there are hard objects or small particle toys on the floor, avoid using DEEBOT to clean to prevent damage.
- If there is ponding or sticky objects on the floor, avoid using DEEBOT to clean to prevent liquid immersion.
- Be careful of hot water burns. Do not touch the water outlet of the OMNI Station or remove DEEBOT while it's washing the mop in the station.
- Please replace the dust bag regularly.
- Please clean the mop washing tray regularly.
- Please clean the driving wheels regularly.
- Do not use any liquid to rinse DEEBOT and OMNI Station.
- Scan the QR code on DEEBOT to access the complete user manual.

Learn more at www.ecovacs.com




Product Guide—Station Setup


- Remove all protective materials from the OMNI station.
- Install the base until you hear a "click" sound, indicating the 4 slots are securely aligned.

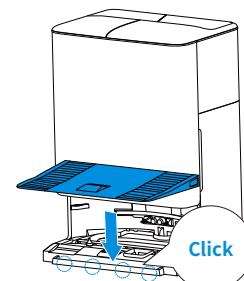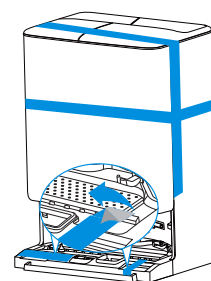

- Place the station on a flat, hard surface against a wall, then power it on.
- Open the clean water tank and fill it. After filling, place the tank back into the station.

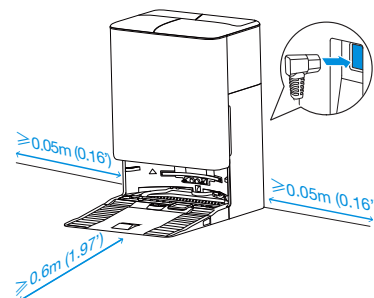


Note:
It's recommended to place the station at a place with strong Wi-Fi signals.
Recommended placement: 0.6m in front and 0.05m to the sides.
A slight mechanical sound from the bottom of the station indicates the station is powered on.

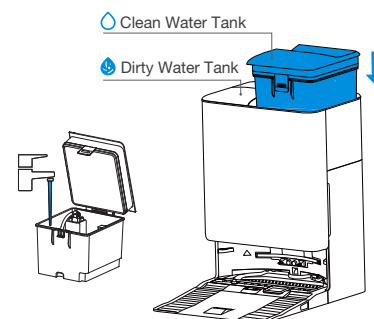

Note:
The water inside the tank may appear as water stains due to the function test. It is safe to use.
Do not add hot water, as it may cause deformation.


- Take off the dust collection cabin cover, pull out the cleaning solution box, and place it on a level, hard surface. Pour the cleaning solution into the box. After securing the box lid, push it back into the station.

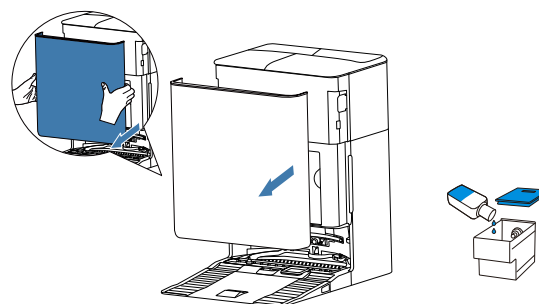

Note:
For a longer lifespan of the product, please use ECOVACS' official cleaning solution.
Do not overfill with cleaning solution, as it may overflow when the lid is secured.
If you do not use floor cleaning solution regularly, this step can be skipped and the auto cleaning solution adding function can be disabled.



Product Guide—App Connection

- Remove all protective materials from DEEBOT.
- Search for "ECOVACS HOME" in the app store or scan the QR code below to install the ECOVACS HOME App.

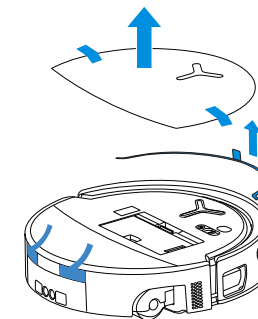



Note:
Wi-Fi connection supports 2.4 GHz or dual-band 2.4/5 GHz mixed networks; standalone 5 GHz band is not supported for the time being.

- Open the ECOVACS HOME App and sign up with your e-mail address.
- Detach the top cover and use ECOVACS HOME APP to scan the QR code on DEEBOT. Follow the instructions to complete the network connection.

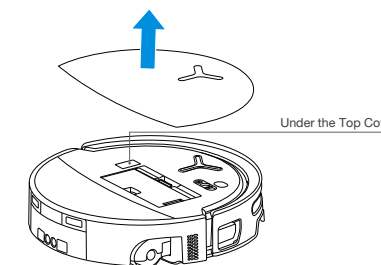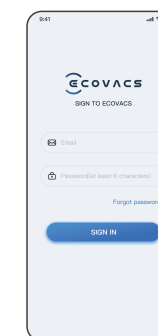

Note:
DEEBOT uses Bluetooth by default for network setup, please ensure that Bluetooth is enabled on your phone. Open the ECOVACS HOME APP, search for your DEEBOT, and follow the instructions to complete the setup.

- Move DEEBOT back to the station. The voice prompt "Start charging" and a breathing white light indicate a successful docking and charging in progress. Start using DEEBOT after creating a map in the ECOVACS HOME APP or via voice commands.

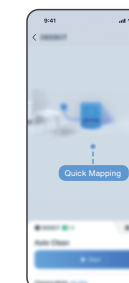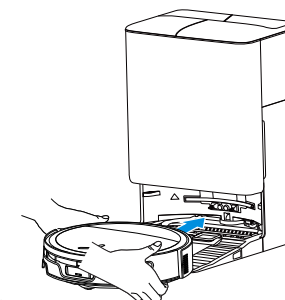

OK, YIKO.

I'm here.

Quick Mapping

* Voice assistant is only available for DEEBOT with YIKO voice feature.

Note:
For the first use, once quick mapping is complete, fully charge DEEBOT before initiating cleaning for the first time. Please start vacuuming for 2-3 times before starting mopping for better cleaning performance. For more voice features, go to the ECOVACS HOME App.